




HLD-100 Quick Start Guide


Thank you for your purchase of the Headline data radio. This unit should provide you years of reliable service and carries a two year manufacture's warranty. If it ever happens to fail, it may be sent to an authorized repair center. Questions concerning warranty coverage or repair information, please contact TecNet International Inc. at 1-800-456-2071, or if calling locally dial 913-859-9515.

DB9 Pinout

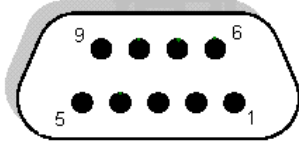

1. Data In: Data input for transmit. Typical input 100mV
2. Data Out: Received data output. Typical output 250mV ~ 300mV
3. PTT: Push to talk. Active low. Grounding this pin will cause the radio to transmit.
4. Ground: Serves as ground for power supply and inputs/outputs.
5. B+: 9V ~18V DC
6. CD: Carrier Detect. Active low. Switches from 5V to 0V when carrier is received. If CTCSS/DCS is programmed, the tone/code must be present for active low.
7. Mic In: Microphone input. Typical input 15mV. Use with high impedance microphone.
8. Switch: Used for radio programming. A low places the radio in program mode.
9. Speaker: Speaker output. 1/2W output to drive a speaker in audio applications.

Channel Selection Chart

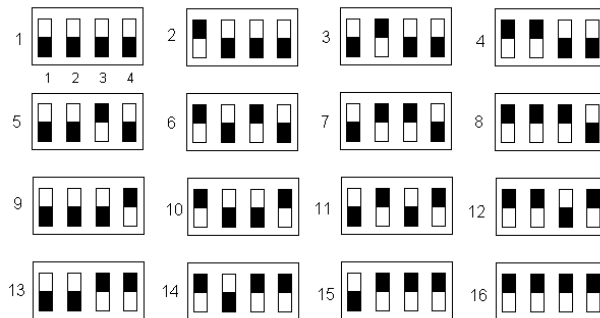

Warranty Policy (Brief)

TecNet International Inc. offers to the original end user a Two (2) Year Limited Warranty on all Maxon and Headline Business and Industrial Radio Products and One (1) Year Limited Warranty on Related Accessories. TecNet warrants each new radio product manufactured or supplied by it to be free from defects in material and workmanship under normal use and service for the time period stated, provided that the user has complied with the requirements stated herein. The warranty period begins on the date of purchase from an Authorized TecNet Dealer. This warranty is not assignable or transferable. This warranty is void if the product serial number is altered, defaced or removed. TecNet is not responsible for any equipment that is attached to or used in conjunction with the Maxon and Headline products.